


Fast assembly concealed hinge

- Accessories
- For Sensys


Adapter plate for parallel adapter

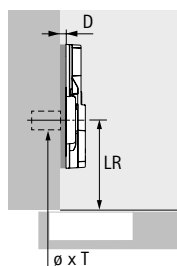

- For connecting parallel adapters
- Quality classification under EN 15570, Level 3
- For use in 28 or 37 mm hole line
- Can only be used with screwed on adapter
- Hole spacing 32 mm
- Oblong hole height adjustment ± 3 mm (versions for screwing on / with premounted Euro screws)
- Oblong hole height adjustment ± 2 mm (version with expanding sockets)
- Nickel plated die-cast zinc

Design	Mounting hole $\varnothing \times T$ mm	Order no. / Distance D mm			PU
		0.0	1.5	3.0	
With premounted Euro screws	$\varnothing 5 \times 12$	9 106 986	9 106 987	9 106 988	1/50 ea.


Parallel adapter

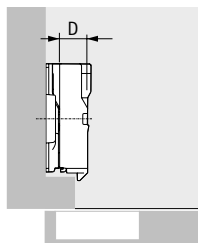

- For screwing onto the adapter plate
- Distances of up to 25 mm can be reached in combination with the adapter plate
- Including fixing screw
- A trial mounting is recommended
- Nickel plated die-cast zinc

Distance D mm	Order no.	PU
8.0	9 072 537	1/50 ea.
12.0	9 072 538	1/50 ea.
22.0	9 072 539	1/50 ea.

Angle adapter for cross mounting plates

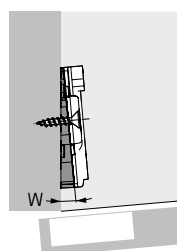


- For realizing face angle applications
- A trial mounting is recommended
- Plastic, anthracite

Angle W°	Order no.	PU
-5	9 237 120	1/50 ea.

Can only be used with LR37 cross mounting plates for screwing on, screw length is defined by the specific configuration

Angle adapter for cross mounting plates

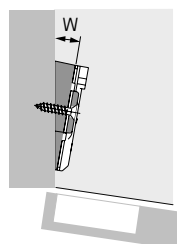

- For realizing face angle applications
- 5° angle adapter can be stacked on the other angle adapters
- A trial mounting is recommended
- Nickel plated die-cast zinc

Angle W°	Order no.	PU
5	9 072 533	1/50 ea.
10	9 072 534	1/50 ea.
15	9 072 535	1/50 ea.
20	9 072 536	1/50 ea.


Can only be used with LR37 cross mounting plates for screwing on, screw length is defined by the specific configuration

Fast assembly concealed hinge

- Accessories
- For Sensys

Information on fitting angle adapter

Angle adapter can only be used with cross mounting plates LR 37 for screwing on

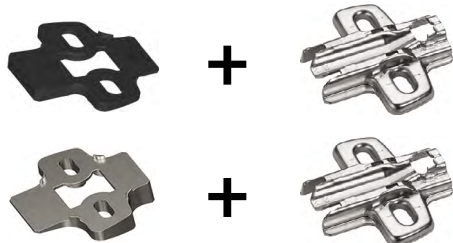


Screw length is determined by specific configuration



Angle adapter W°	Screw length L mm
-15	25
-10	22
-5	20
5	20
10	22
15	25
20	30
25	35

Adapter for inset doors on front frame

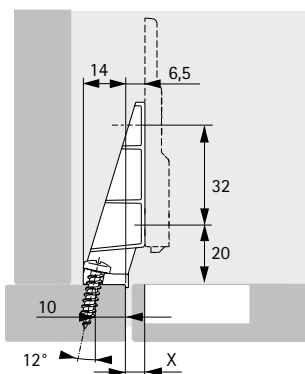

- For creating inset doors on cabinets with front frame
- Quality classification under EN 15570, Level 3
- For combining with linear mounting plate for screwing on and hinge for half overlay doors
- Attachment to front frame by $\varnothing 4 \times 20$ mm panhead screws
- The mounting plate is attached to the adapter with $\varnothing 4 \times 12$ mm self tapping special screws (order no. 9 076 418 / 100 each)
- Nickel plated die-cast zinc

Mounting plate Distance mm	Hinge Base mm	Dimension X mm
0,5	3	4
1,5	3	5
3	3	6,5

Order no.	PU
9 227 315	1/50 ea.

Cover cap for Sensys hinge arm



- Can be used with Sensys hinges apart from 8657i / 8657 / 8687
- Cover caps with customised embossed or printed logo on request
- Steel, nickel plated

Design	Order no.	PU
neutral	9 088 249	1/50 ea.
embossed with Hettich logo	9 088 250	1/50 ea.

Cover cap for Sensys hinge arm



- Can be used with all Sensys hinges apart from Sensys wide angle hinge
- Cover caps with customised embossed or printed logo on request
- Steel in obsidian black

Design	Order no.	PU
neutral	9 091 820	1/50 ea.
embossed with Hettich logo	9 091 821	1/50 ea.